




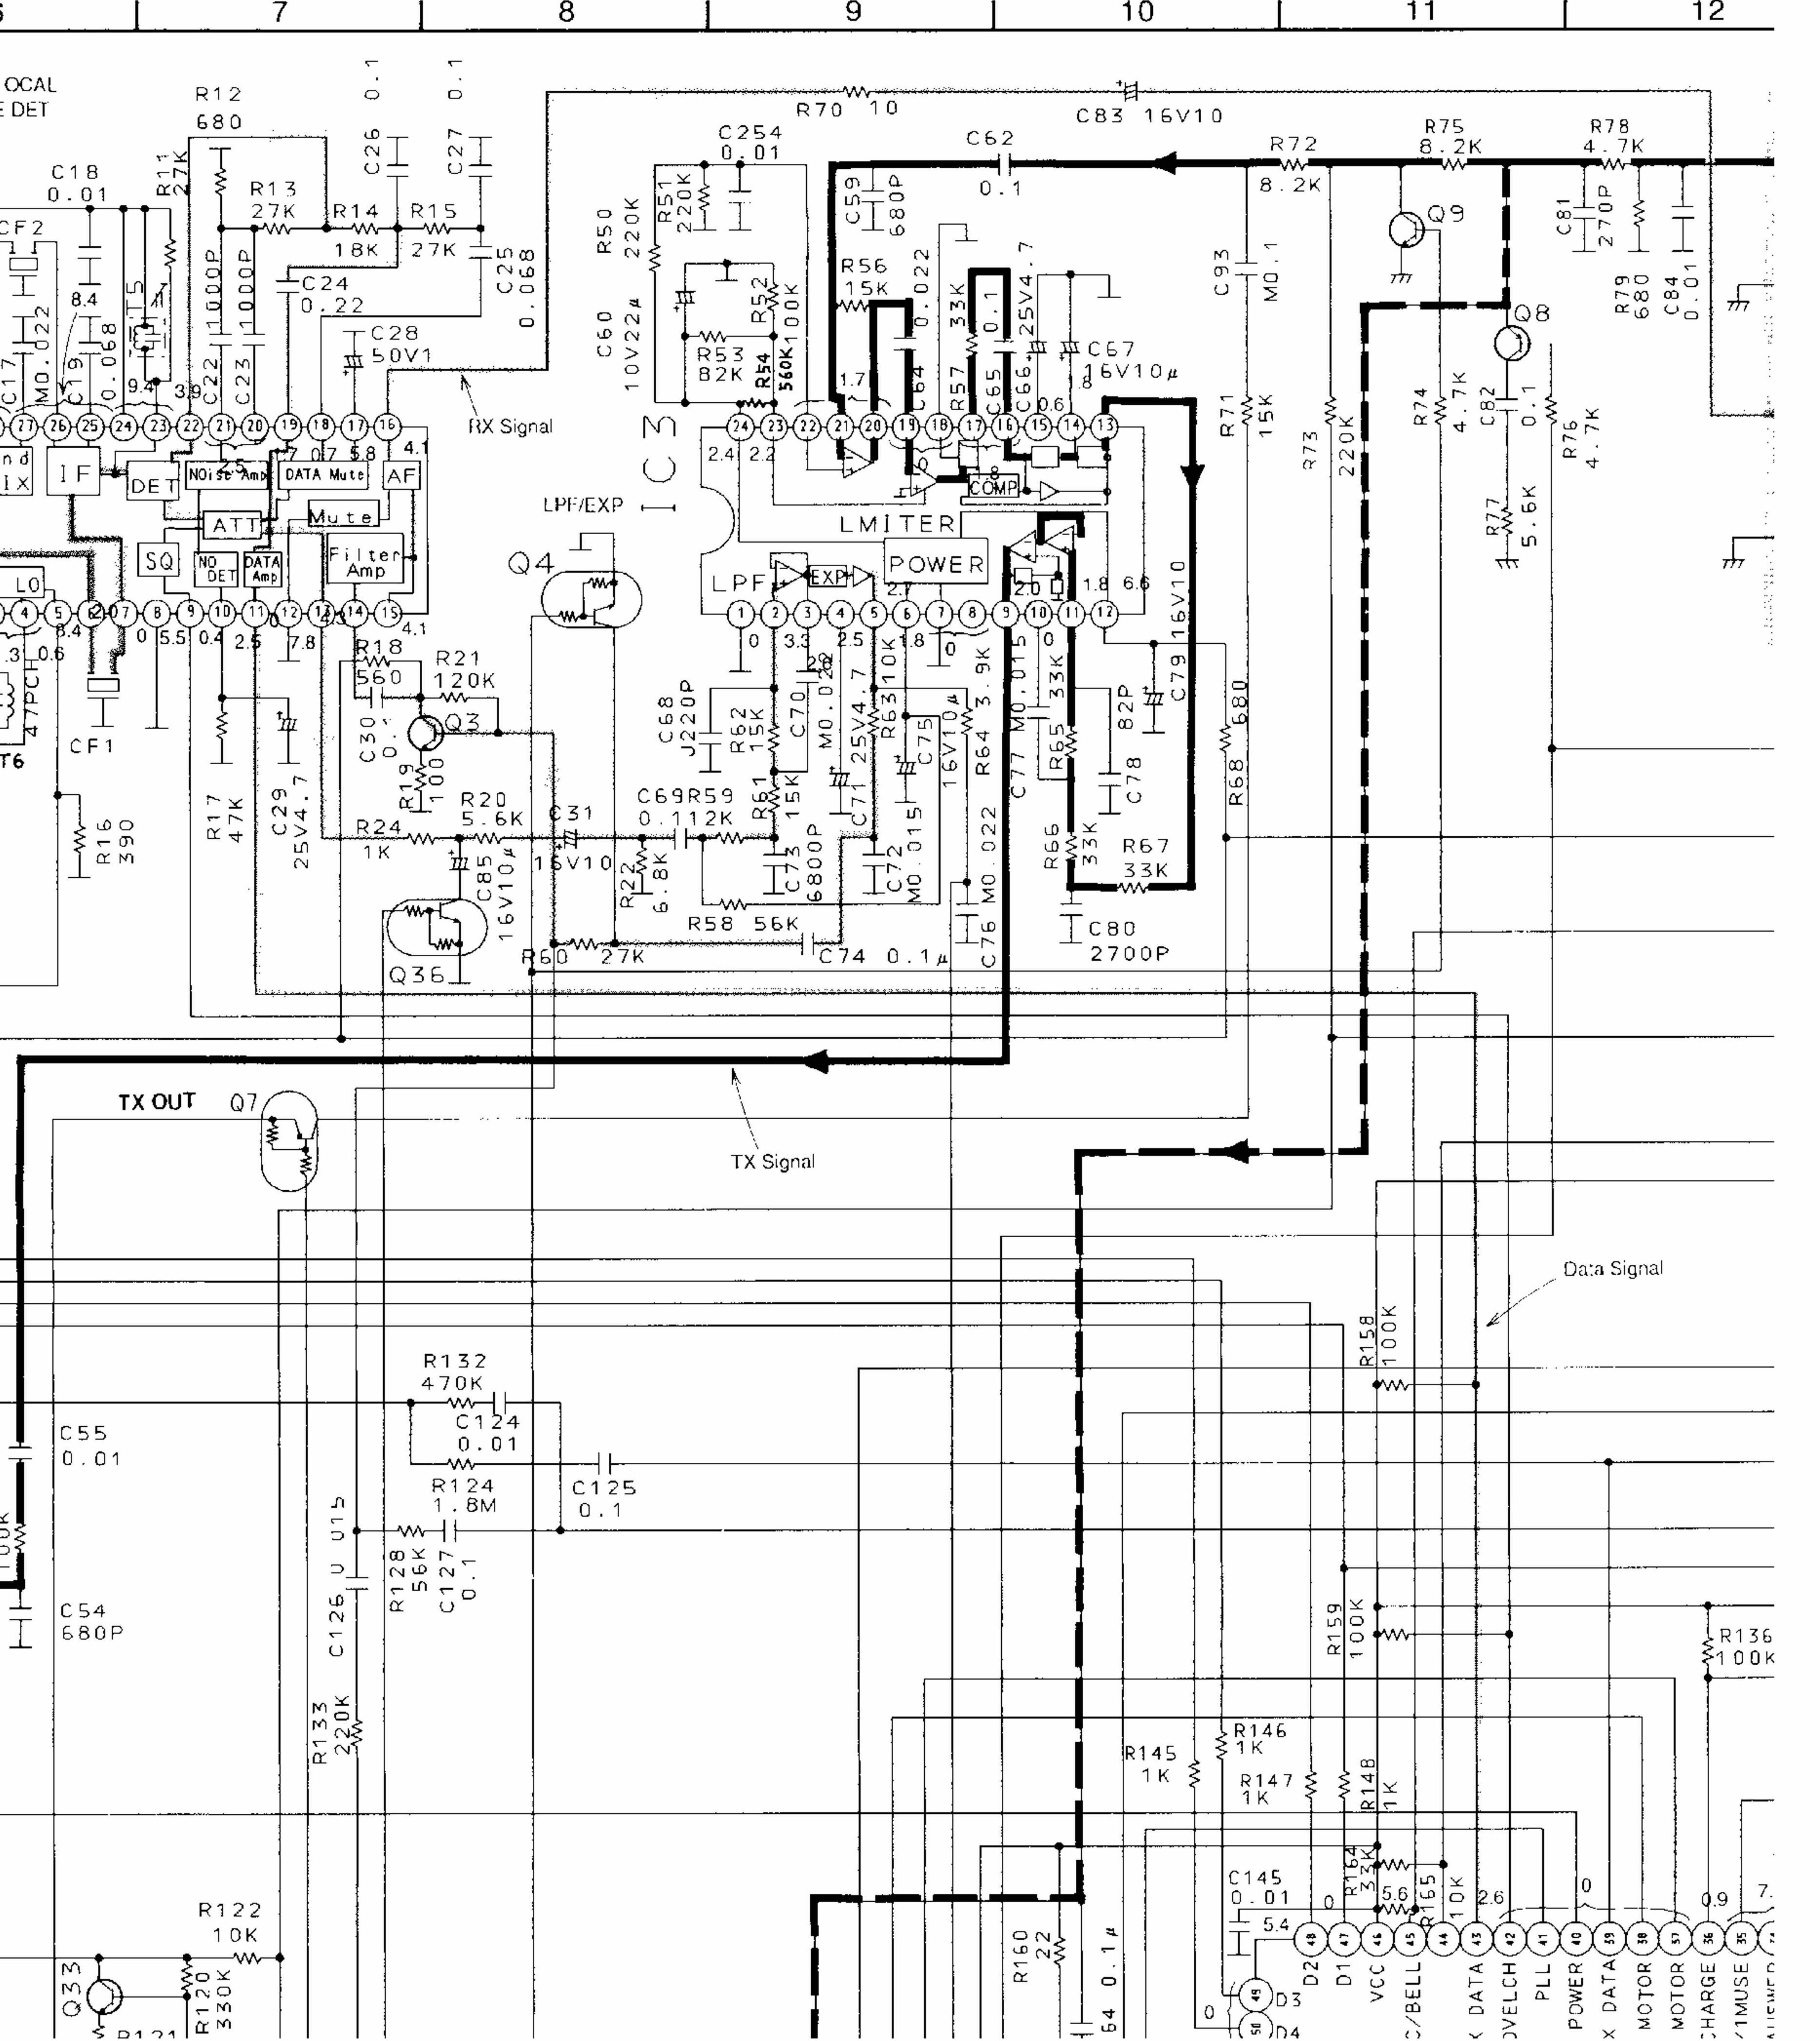

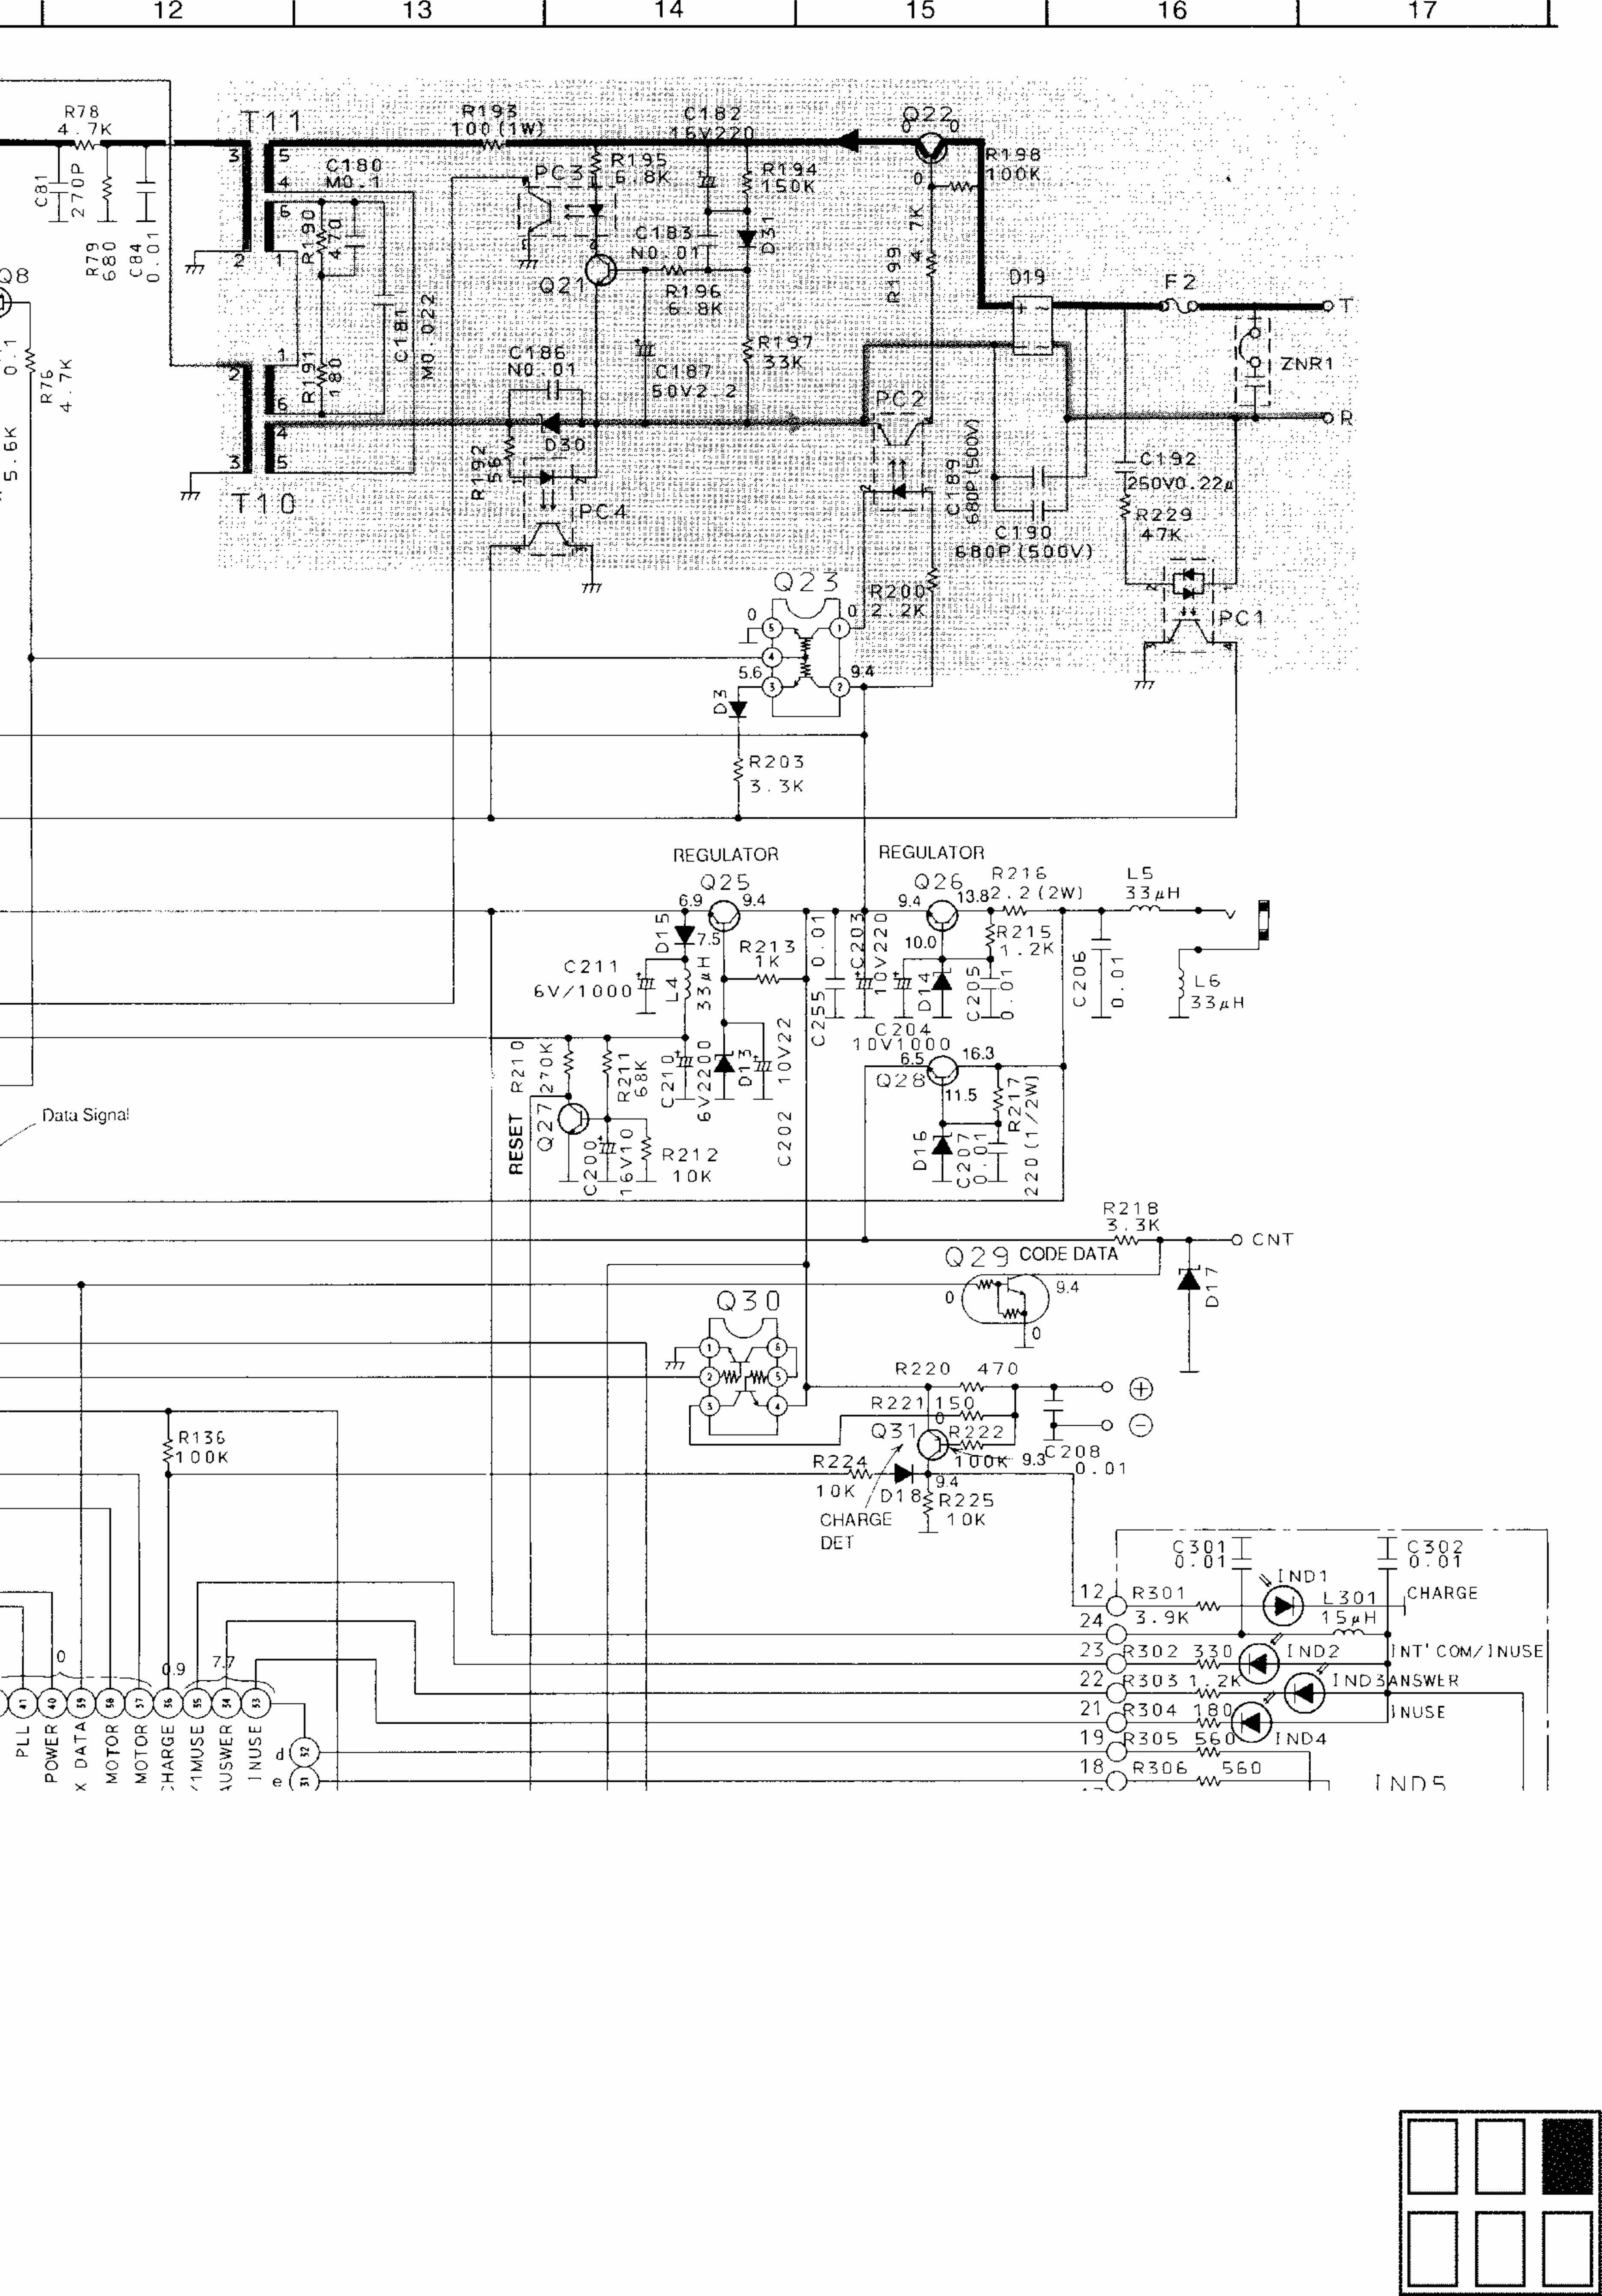

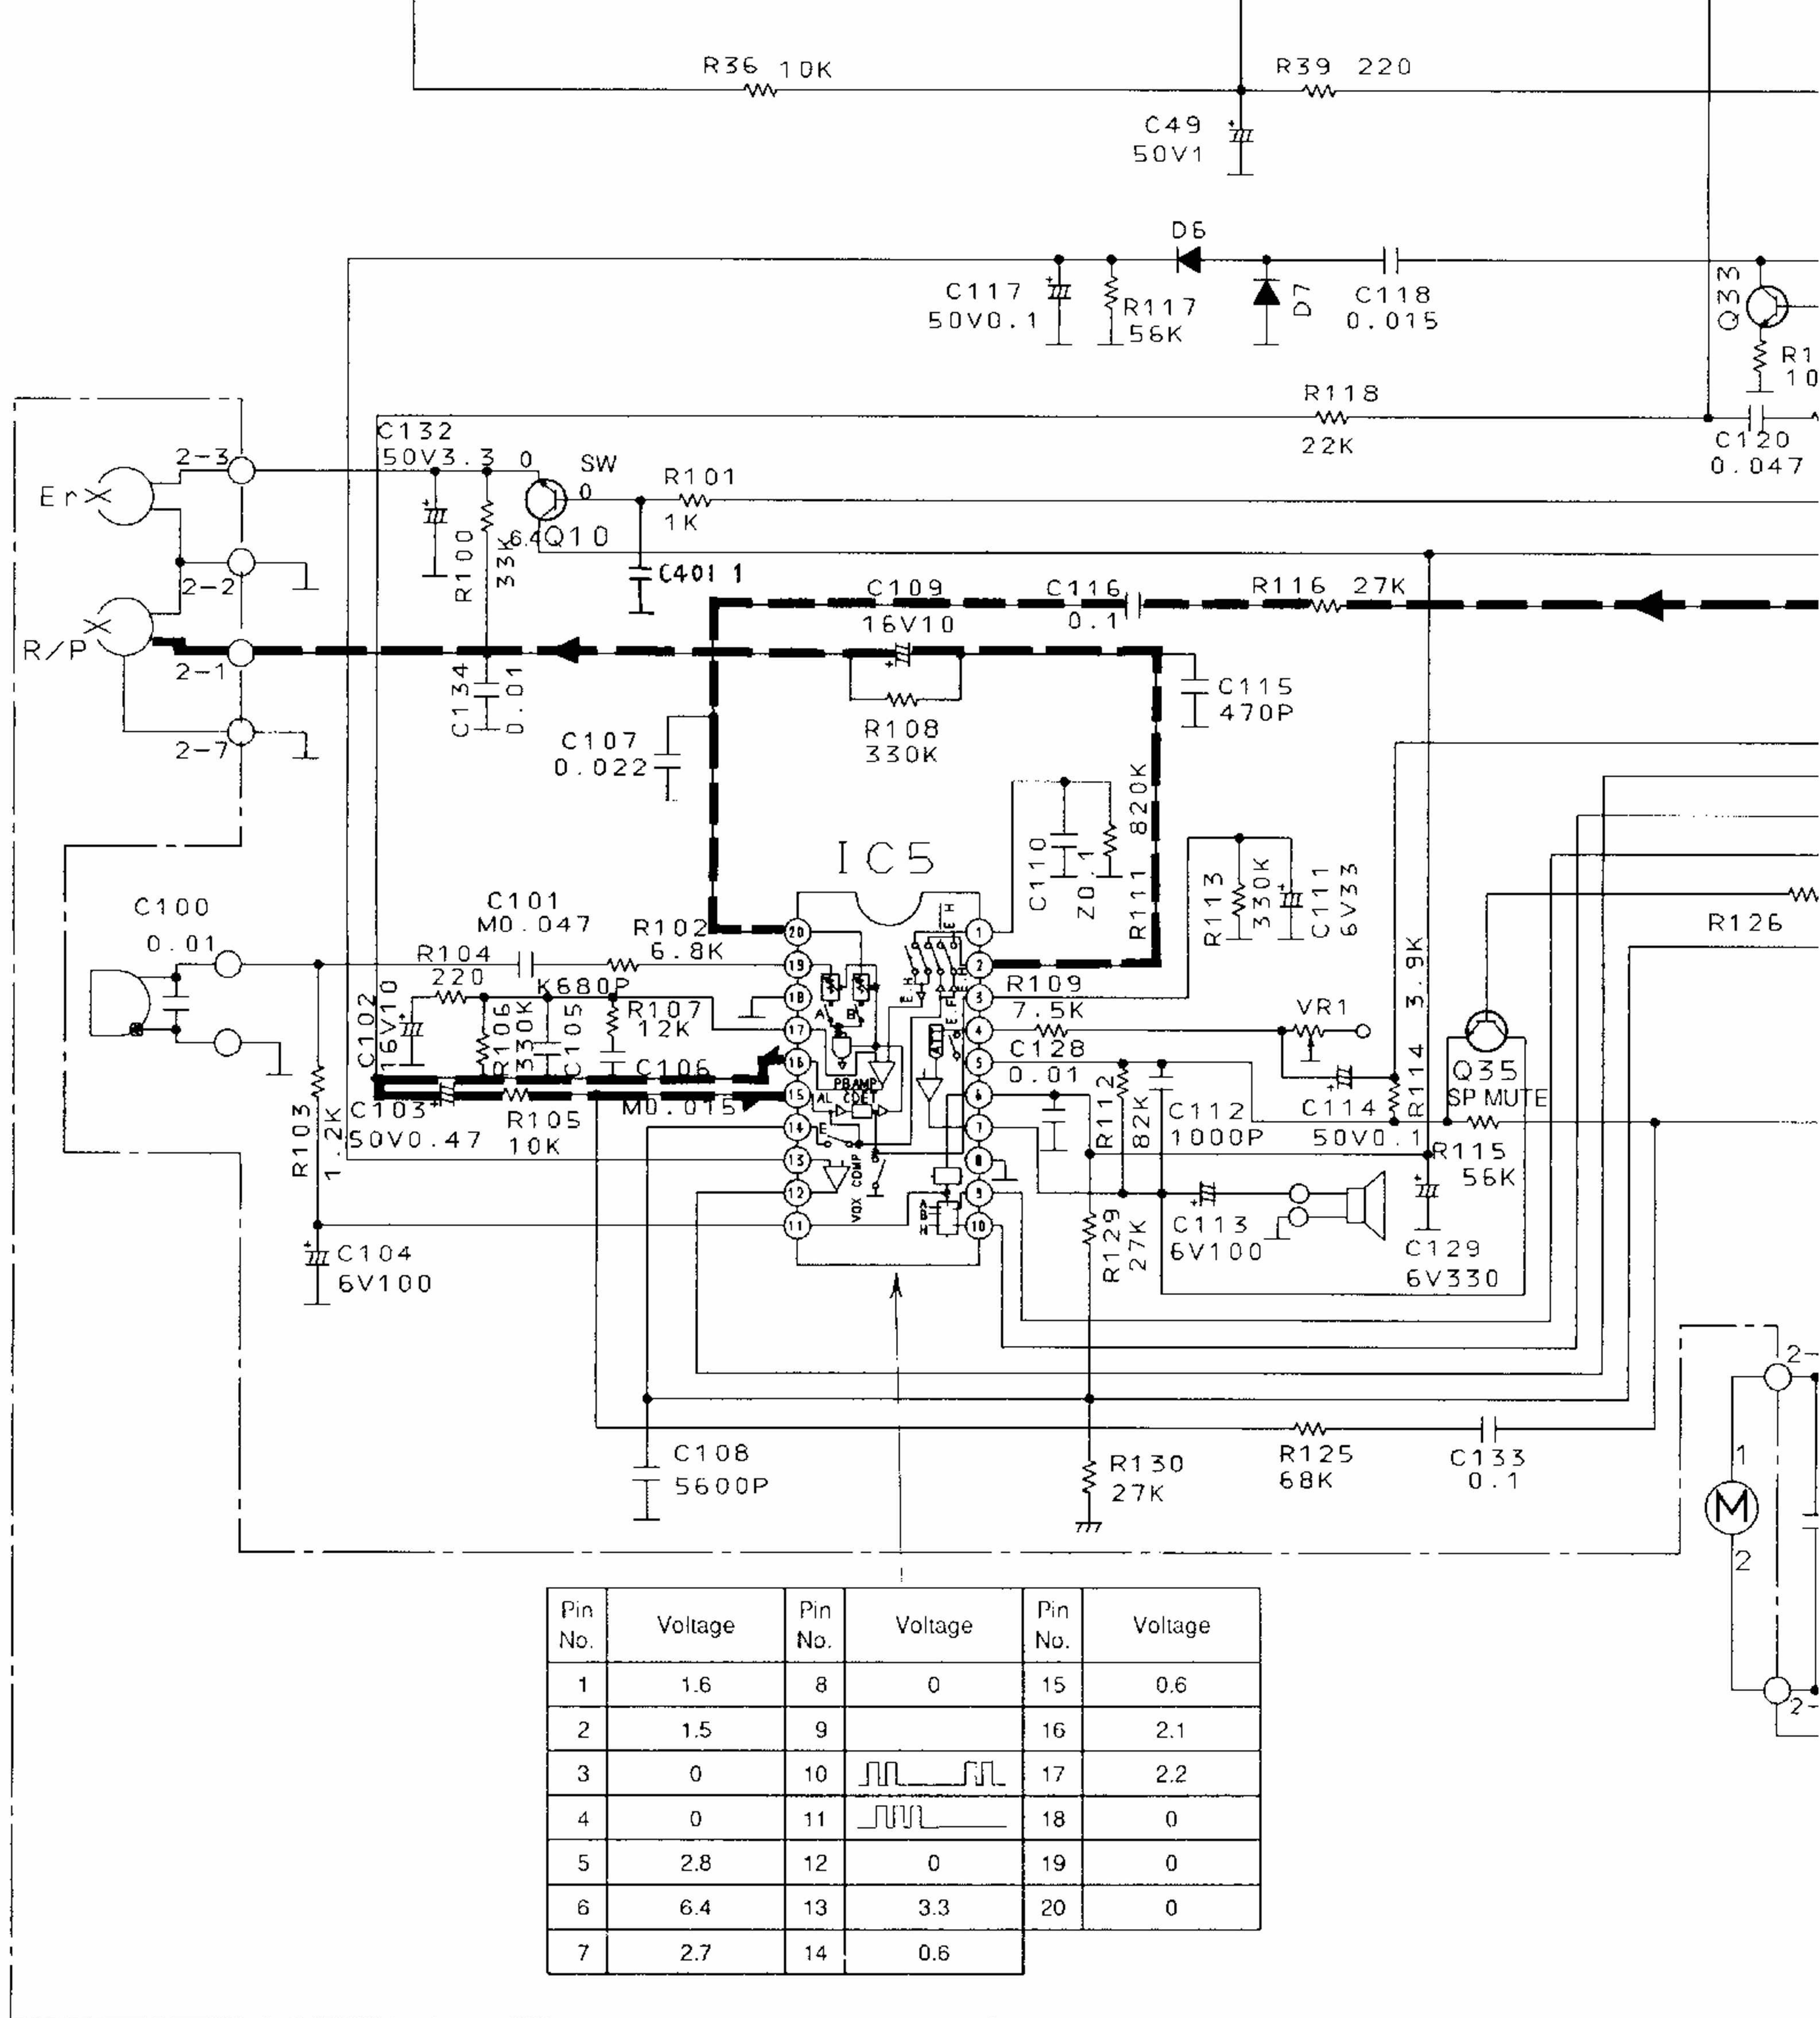

Notes:

1. SW1: Dialing Mode Selector.
2. SW2: Rings Selector.
3. SW3: CPC Selector.
4. SW4: Message Alert Selector.
5. SW5: Remote Code Selector.
6. SW6: Handset Security Code Selector.
7. SW301: Answer On Switch.
8. SW302: Fast Forward Switch.
9. SW303: Rewind Switch.
10. SW304: Stop Switch.
11. SW305: Message Playback.
12. SW306: Power On/Off Switch.

