Integrated Quad Half H-Bridge with Power Supply, Embedded MCU, and LIN Serial Communication

Thermal Addendum

Introduction

This thermal addendum ia provided as a supplement to the MM908E626 technical data sheet. The addendum provides thermal performance information that may be critical in the design and development of system applications. All electrical, application and packaging information is provided in the data sheet.

Package and Thermal Considerations

This MM908E626 is a dual die package. There are two heat sources in the package independently heating with P₁ and P₂. This results in two junction temperatures, T_{J1} and T_{J2} , and a thermal resistance matrix with $R_{\theta JAmn}$.

For m, n = 1, $R_{\theta JA11}$ is the thermal resistance from Junction 1 to the reference temperature while only heat source 1 is heating with P₁.

For m = 1, n = 2, $R_{\theta JA12}$ is the thermal resistance from Junction 1 to the reference temperature while heat source 2 is heating with P2. This applies to $R_{\theta J21}$ and $R_{\theta J22}$, respectively.

The stated values are solely for a thermal performance comparison of one package to another in a standardized environment. This methodology is not meant to and will not predict the performance of a package in an application-specific environment. Stated values were obtained by measurement and simulation according to the standards listed below.

Standards

Table 1. Thermal Performance Comparison

Thermal Resistance	1 = Power Chip, 2 = Logic Chip [°C/W]			
	m = 1, n = 1	m = 1, n = 2 m = 2, n = 1	m = 2, n = 2	
R _{θJAmn} (1)(2)	23	20	24	
R _{θJBmn} (2)(3)	9.0	6.0	10	
R _{θJAmn} (1)(4)	52	47	52	
R ₀ JCmn (5)	1.0	0	2.0	

Notes:

- 1. Per JEDEC JESD51-2 at natural convection, still air condition.
- 2. 2s2p thermal test board per JEDEC JESD51-7and
- 3. Per JEDEC JESD51-8, with the board temperature on the center trace near the power outputs.
- Single layer thermal test board per JEDEC JESD51-3 and JESD51-5.
- Thermal resistance between the die junction and the exposed pad, "infinite" heat sink attached to exposed pad.

908E626ACDWB

54-TERMINAL SOICW-EP



DWB SUFFIX 98ARL105910 **54-TERMINAL SOICW-EP**

Note For package dimensions, refer to the 908E626 device datasheet.


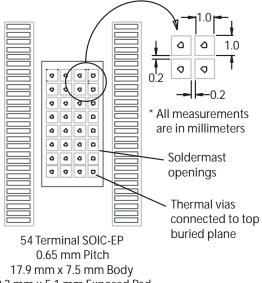


Figure 1. Thermal Land Pattern for Direct Thermal Attachment Per JEDEC JESD51-5Thermal Test Board

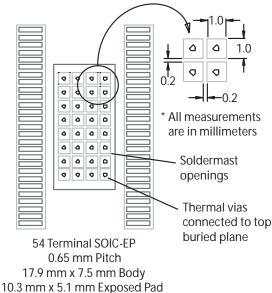

Technical Data

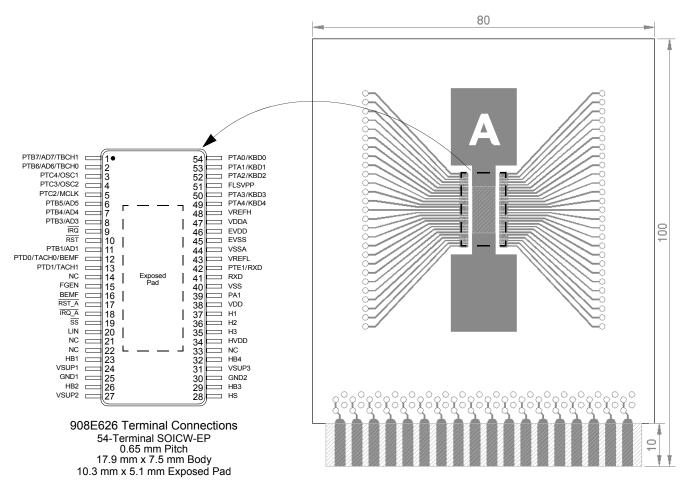


Figure 2. Thermal Test Board

Device on Thermal Test Board

Single layer printed circuit board Material:

FR4, 1.6 mm thickness

Cu traces, 0.07 mm thickness

Outline: 80 mm x 100 mm board area,

including edge connector for thermal

testing

Area A: Cu heat-spreading areas on board

surface

Ambient Conditions: Natural convection, still air

Table 2. Thermal Resistance Performance

Thermal Resistance	Area A (mm²)	1 = Power Chip, 2 = Logic Chip (°C/W)			
		m = 1, n = 1	m = 1, n = 2 m = 2, n = 1	m = 2, n = 2	
$R_{\theta JAmn}$	0	53	48	53	
	300	39	34	38	
	600	35	30	34	
$R_{\theta JSmn}$	0	21	16	20	
	300	15	11	15	
	600	14	9.0	13	

 $R_{\theta JA}$ is the thermal resistance between die junction and ambient air.

 $R_{\theta JSmn}$ is the thermal resistance between die junction and the reference location on the board surface near a center lead of the package (see Figure 1)

This device is a dual die package. Index *m* indicates the die that is heated. Index *n* refers to the number of the die where the junction temperature is sensed.



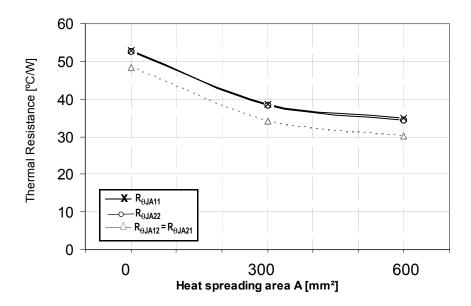


Figure 3. Device on Thermal Test Board $R_{\theta JA}$

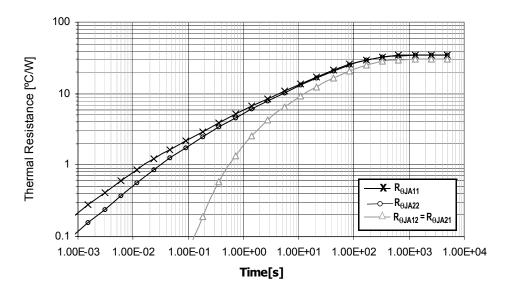


Figure 4. Transient Thermal Resistance $R_{\theta JA}$ (1.0 W Step Response) Device on Thermal Test Board Area A = 600 (mm²)



How to Reach Us:

Home Page:

www.freescale.com

support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor Technical Information Center, CH370 1300 N. Alma School Road Chandler, Arizona 85224 +1-800-521-6274 or +1-480-768-2130 support@freescale.com

Europe, Middle East, and Africa: Freescale Halbleiter Deutschland GmbH **Technical Information Center** Schatzbogen 7 81829 Muenchen, Germany +44 1296 380 456 (English) +46 8 52200080 (English) +49 89 92103 559 (German) +33 1 69 35 48 48 (French) support@freescale.com

Freescale Semiconductor Japan Ltd. Headquarters ARCO Tower 15F 1-8-1, Shimo-Meguro, Meguro-ku, Tokyo 153-0064 Japan 0120 191014 or +81 3 5437 9125 support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd. **Technical Information Center** 2 Dai King Street
Tai Po Industrial Estate Tai Po, N.T., Hong Kong +800 2666 8080 support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center P.O. Box 5405 Denver, Colorado 80217 1-800-441-2447 or 303-675-2140 Fax: 303-675-2150 LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should a Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, the Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2005. All rights reserved.

